





IF TELEPHONE EQUIPMENT PROTECTORS ARE TO BE  
USED WITHIN THIS ENCLOSURE, THEN THE APPLICABLE  
REQUIREMENTS OF THE REC. ANSI/NFPA 70 (ARTICLE 800.50) SHOULD  
BE FOLLOWED.

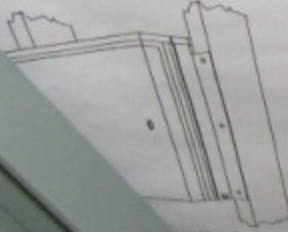


FIGURE 1

FIGURE 1  
TWO ARE PROVIDED FOR THIS  
TYPE OF INSTALLATION.  
MOUNTING SOCKETS TO SIDES OF CABINET  
ARE PROVIDED AT 7 INCHES

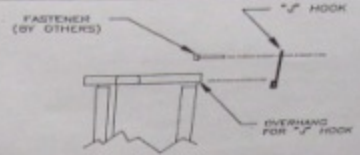


FIGURE 2  
(N.T.S.)

**SURFACE MOUNTING INSTALLATION (FIGURE 2)**

TWO "J" HOOKS ARE PROVIDED FOR THIS  
TYPE OF INSTALLATION.

1. DETERMINE LOCATION OF CABINET ON WALL.  
FASTEN "J" HOOKS SECURELY TO WALL USING  
PROPER WALL ANCHORS.
2. SECURE THE CABINET IN PLACE ALLOWING  
FORWARD ON REAR OF LID TO FALL INTO  
"J" HOOKS.
3. SECURE THE CABINET IN PLACE BY A SECOND  
FASTEN "J" HOOK SECURELY TO WALL USING  
PROPER WALL ANCHORS.

**INSTALLATION INSTRUCTIONS**

